




Valve Replacement Procedure with SKK Flange Adaptor

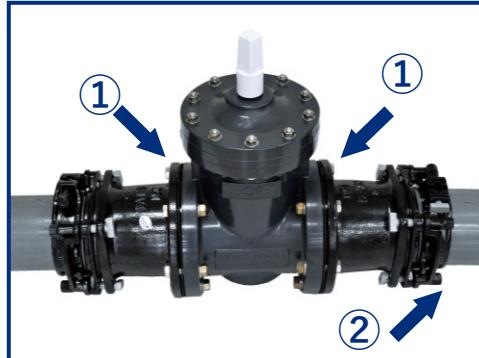

1 Remove flange bolts


2 Loosen the bolts on one side of joints



3 Slide one of the joint for outwards



4 The valve can be removed
Valve can be replaced

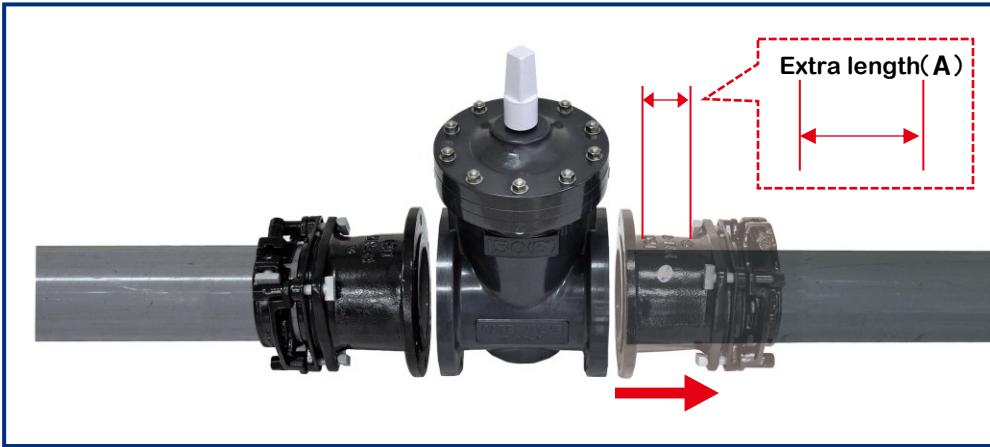

SK joints using, extra length slide on the pipe as reference

OD	Extra length (A)	DN	Extra length (A)
63	42mm	250	46mm
90	45mm	300	49mm
110	43mm	350	69mm
140	48mm	400	72mm
160	53mm	450	71mm
200	53mm	500	70mm

※Please install the fitting dimension for pipe insertion amount to ensure sufficient clearance at the pipe.



Install Movie